



# **GIANT INSTRUCTIONS**

PN: 21017

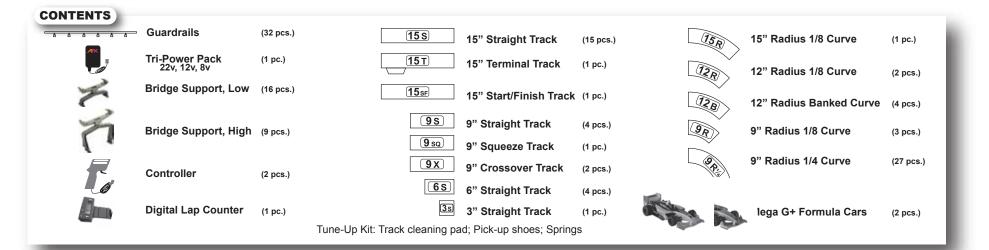

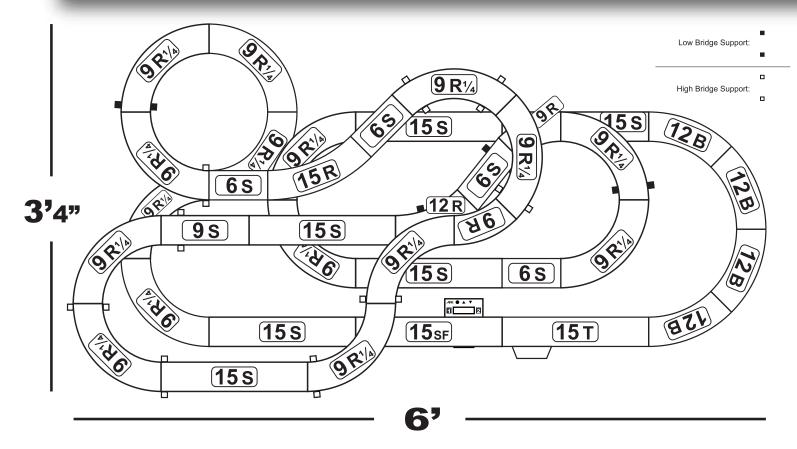



#### AFXRACING.COM

- FAQs
  - Video Set-Up Tips
- Video Troubleshooting

service@afxracing.com

### 877-866-9239

We will always respond to Email and phone calls as quickly as possible and in any case within 24 hours, not counting weekends and holidays.



Copyright 2015 Racemasters, Inc. Manufactured by Tomy Company, Ltd., Tokyo, Japan 124-8511 Distributed by Racemasters, Inc. Reno, NV 89511

## Tips and Tricks . . .

track. Moisture in the air causes corrosion on the steel track rails and it takes a few laps of running to clean it off. So just give the car a push any time it stops and continue to drive. It will get better each lap and usually after 3 to 5 laps, the problem goes away completely. This can happen anytime the track is unused for many days.

perfectly. This is usually caused by little gaps between the track pieces that allow movement over large areas when you are laying down the track. To avoid this, start laying down track from the center of the longest straightaway. If the track doesn't come together perfectly, connect it anyway and the adjust the track by smoothing out the straights and corners a little bit at each track segment.

ower On:
et Number of Laps:
tart Race:
ump Start:
eset:

Power Off:

Press UP or DOWN buttons Power turns off after 5 minutes of no activity

