





BATTLER INSTRUCTIONS


PN: 21004

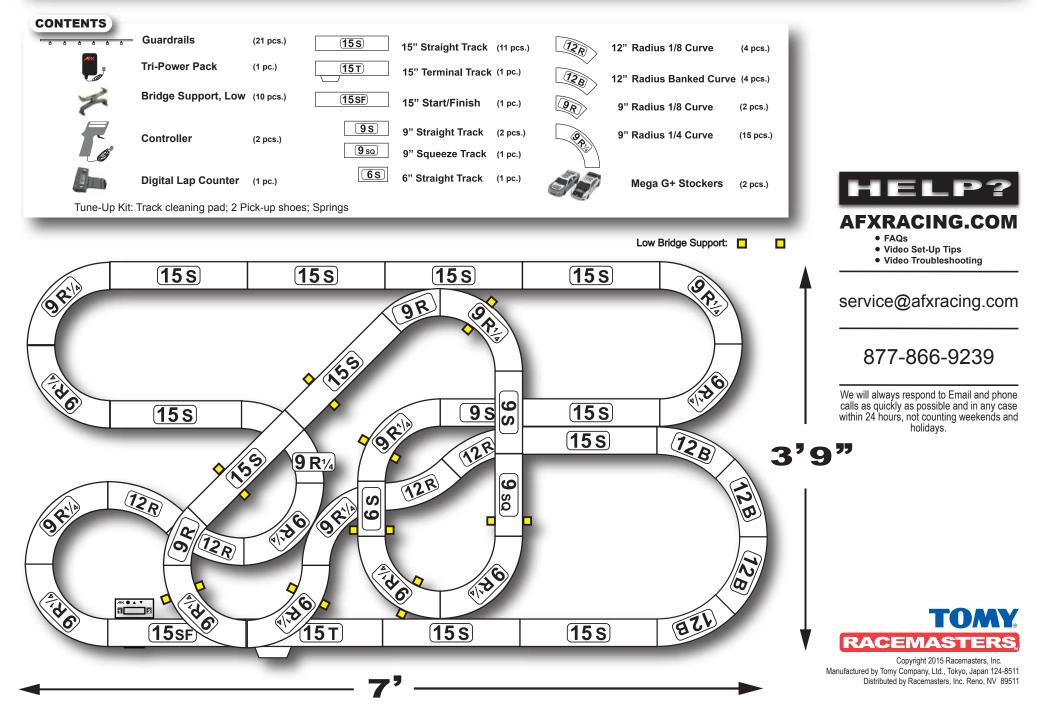

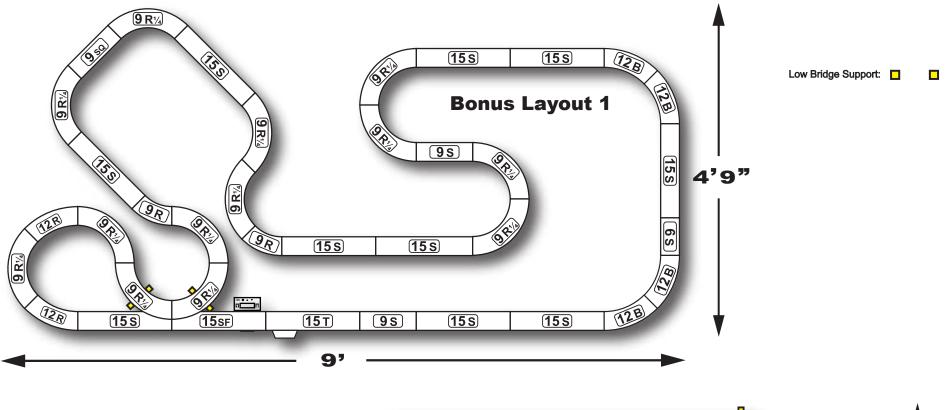

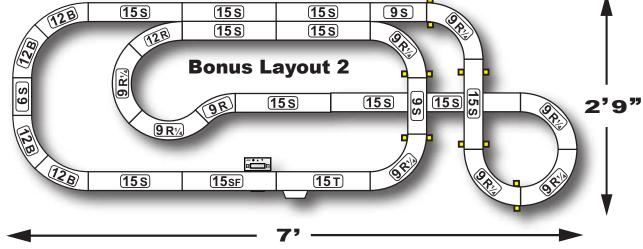

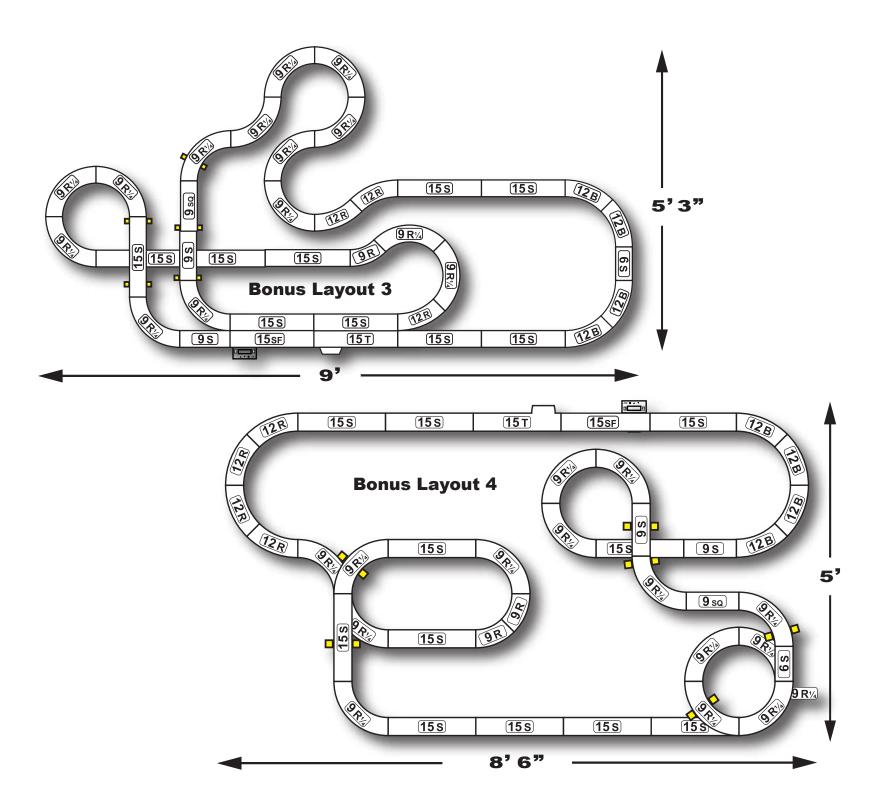

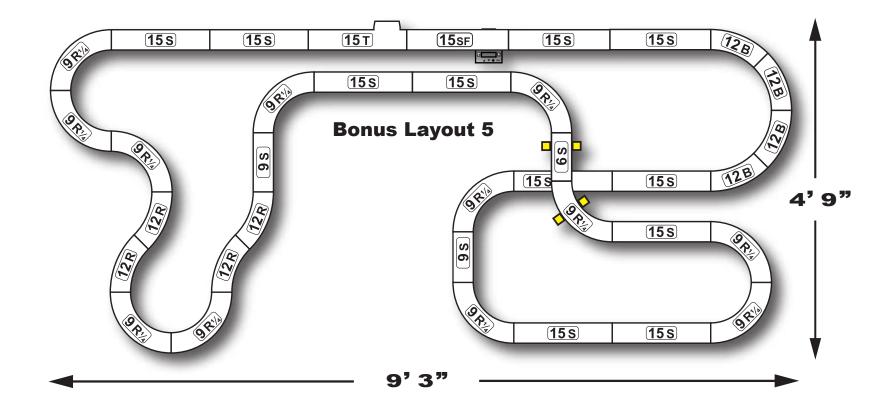

Lap Counter Instructions

Power On: Set Number of Laps: Start Race: Jump Start: Reset:

Race End: Power Off: Flip Display: Press and hold MAIN (round) button Press UP or DOWN buttons

Press, hold MAIN button, release when countdown starts If racer leaves before "Go", racer is penalized 1 lap Press MAIN button once after race begins to start over Press and hold MAIN button after finish to start at "0" First to cross line displays trophy; second displays P2 Power turns off after 5 minutes of no activity Press and hold UP and DOWN buttons to flip display 180°

Lap Counter

U.S. FCC Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.