



STARTUP  
SHOOTOUT

# INSTRUCTIONS

SSX19P140 AFX PN: 22024

## CONTENTS



- Guardrails (12 pcs.)
- AFX Race Barriers (3 pcs.)
- Tri-Power Pack 22v, 12v, 8v (1 pc.)
- AFX120 Controller (2 pcs.)
- Digital Lap Counter (1 pc.)

- 15S** 15" Straight Track (3 pcs.)
- 15T** 15" Terminal Track (1 pc.)
- 9S** 9" Straight Track (1 pc.)
- 6S** 6" Straight Track (1 pc.)
- 18R** 18" Radius 1/8 Curve (6 pcs.)
- 9R** 9" Radius 1/8 Curve (4 pcs.)
- 9R<sup>1/4</sup>** 9" Radius 1/4 Curve (8 pcs.)
- Sticker Sheet** (1 pc.)
- Mega G+ Muscle Cars** (2 pcs.)
- Tune-Up Kit: Track cleaning pad; 2 Pick-up shoes; Springs

## HELP? AFXRACING.COM

- FAQs
- Video Set-Up Tips
- Video Troubleshooting



service@afxracing.com



877-866-9239  
(US Only)




AFXRACING.COM

We will always respond to Email and phone calls as quickly as possible and in any case within 24 hours, not counting weekends and holidays.



## TOMY RACEMASTERS

Copyright 2019 Racemasters, Inc.  
Manufactured by Tomy Company, Ltd., Tokyo, Japan 124-8511  
Distributed by Racemasters, Inc. Reno, NV 89506

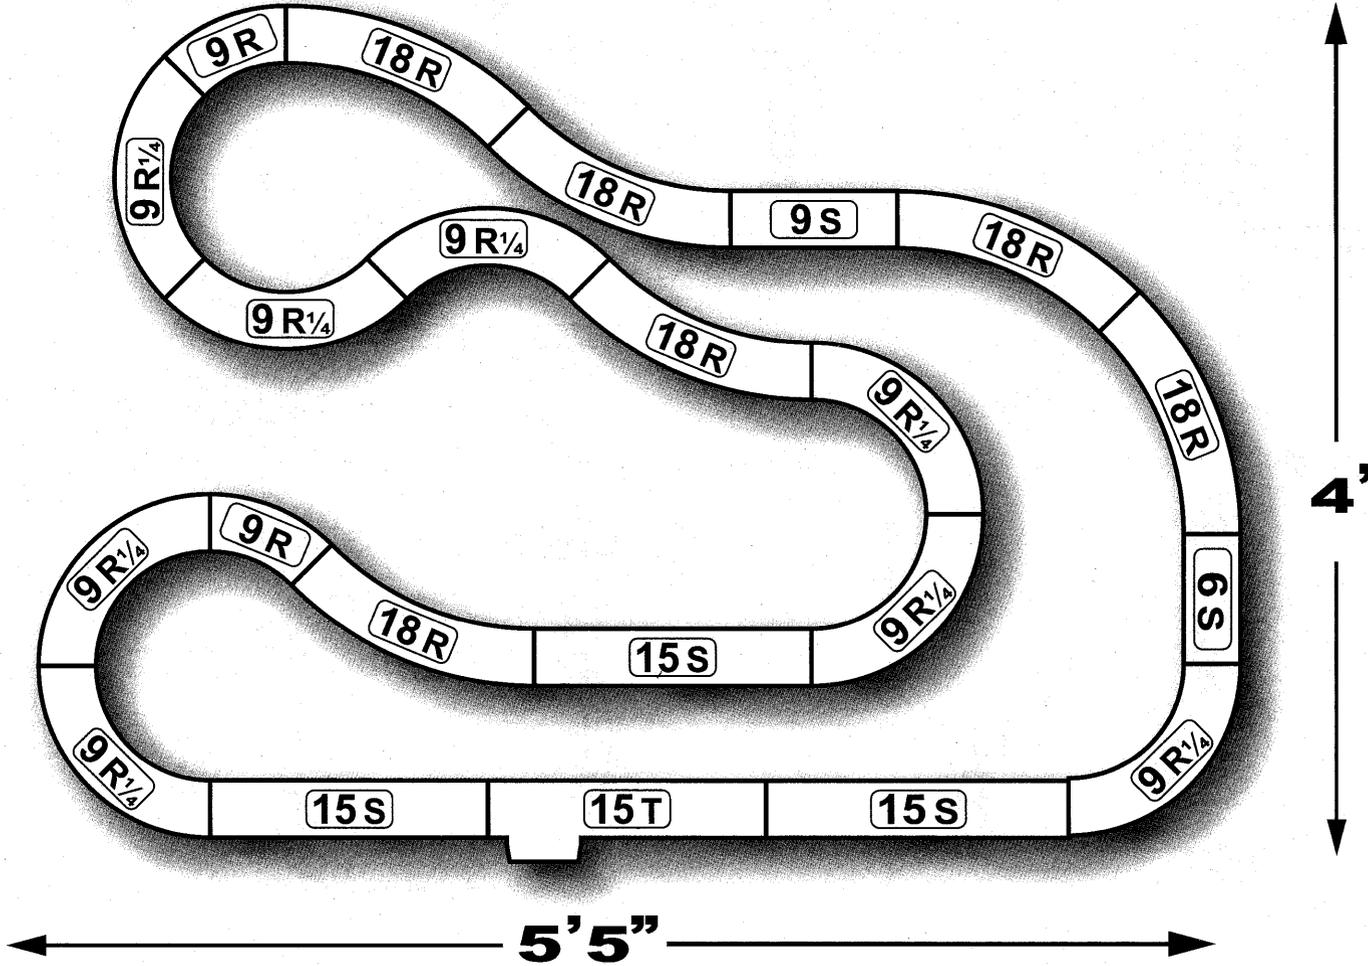






# INSTRUCTIONS


## Step 1: Plan Location of Barriers

Select your layout and decide where you want your barriers. Determine how long your barrier needs to be and cut to length if you choose. **TIP:** You don't have to place barriers on every corner. If you put them on the outside corners of your layout they will still keep crashing cars inside the layout most of the time.

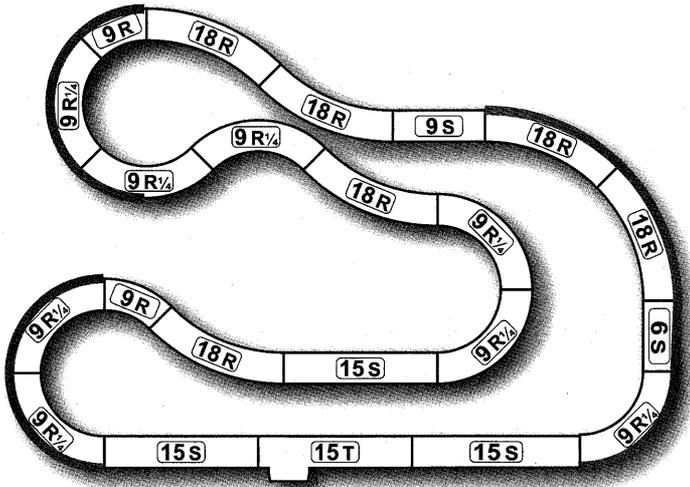


## Step 2: Pull the Backing off of the Adhesive

**TIP:** You may want to keep the backing strips to protect the adhesive if you remove the barrier later.

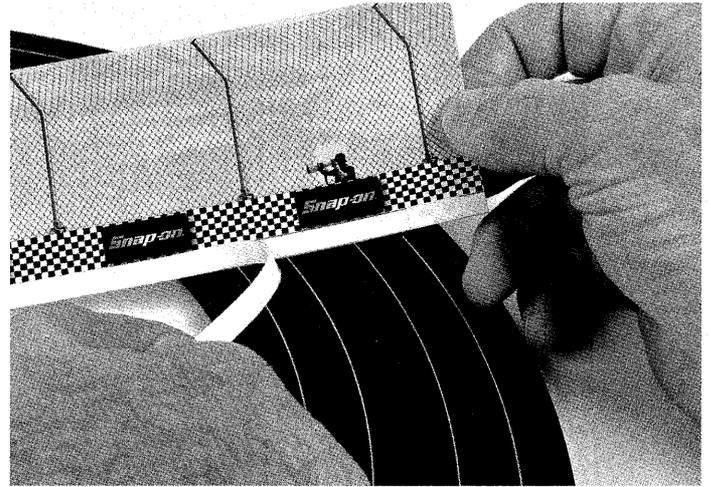


## Step 3: Install Barrier

Make sure the track is on a smooth, hard surface like a wood floor or table top (not carpet!) then stick one end of the Barrier in place. Now use one hand to hold it down while using the other hand to press it in place around the corner. **TIP:** You can remove and replace the barrier. Carefully pull one end about an inch away then get a good grip and pull the rest quickly and smoothly. Then re-apply.

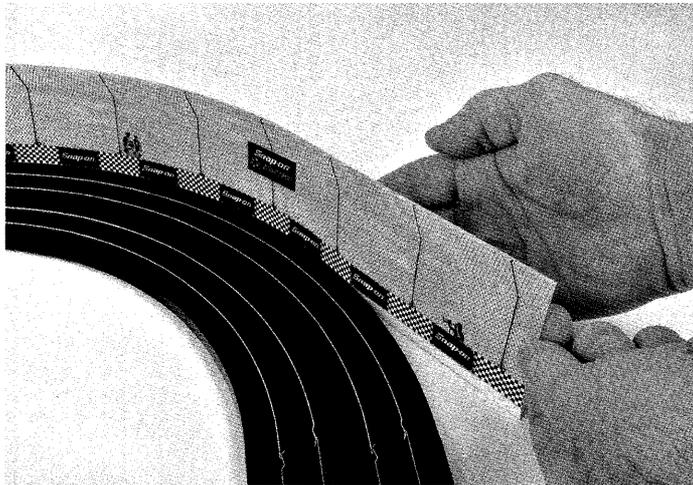

## FINISHED!!

**TIP:** Barriers can be removed and replaced many times and still stick well. But eventually the adhesive will get dirty and loose grip. When this happens, you can get much of the grip back by washing carefully with your bare fingers and a drop or two of dishwashing soap (like Dawn) in water. Then let air dry.

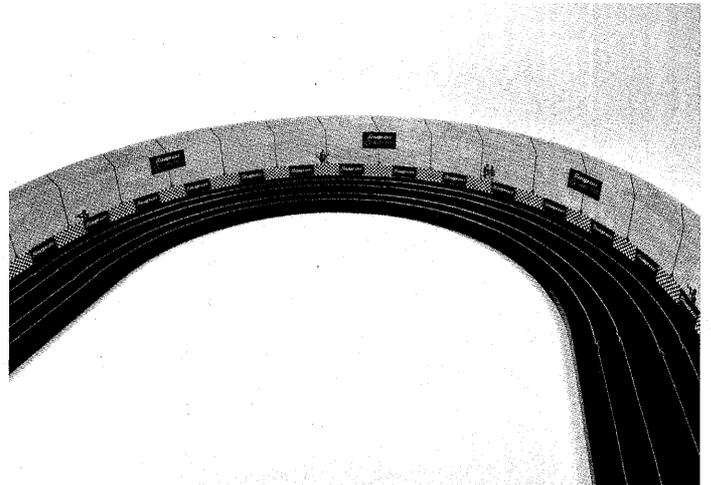

*Snap-on*<sup>®</sup>



*Snap-on*<sup>®</sup>



*Snap-on*<sup>®</sup>



*Snap-on*<sup>®</sup>



*Snap-on*<sup>®</sup>



*Snap-on*<sup>®</sup>